

# PROFILES

## Fluted Wood Panels with Extraordinary Surface Finishes

NOT PVC / CHARCOAL / WPC



TIMBER



MARBLE



COLORS

European architect-grade product from the house of

**vivre PANELS**

# SPECIFICATIONS


CORE: Engineered Wood (HMR-Grade Fibreboard)

FINISH: Textured Poly Vinyl Membrane

HEIGHT: 9 ft (2750 mm)

WIDTH: 121 mm (4.75 inches)


THICKNESS: 18 mm (3/4th inch)

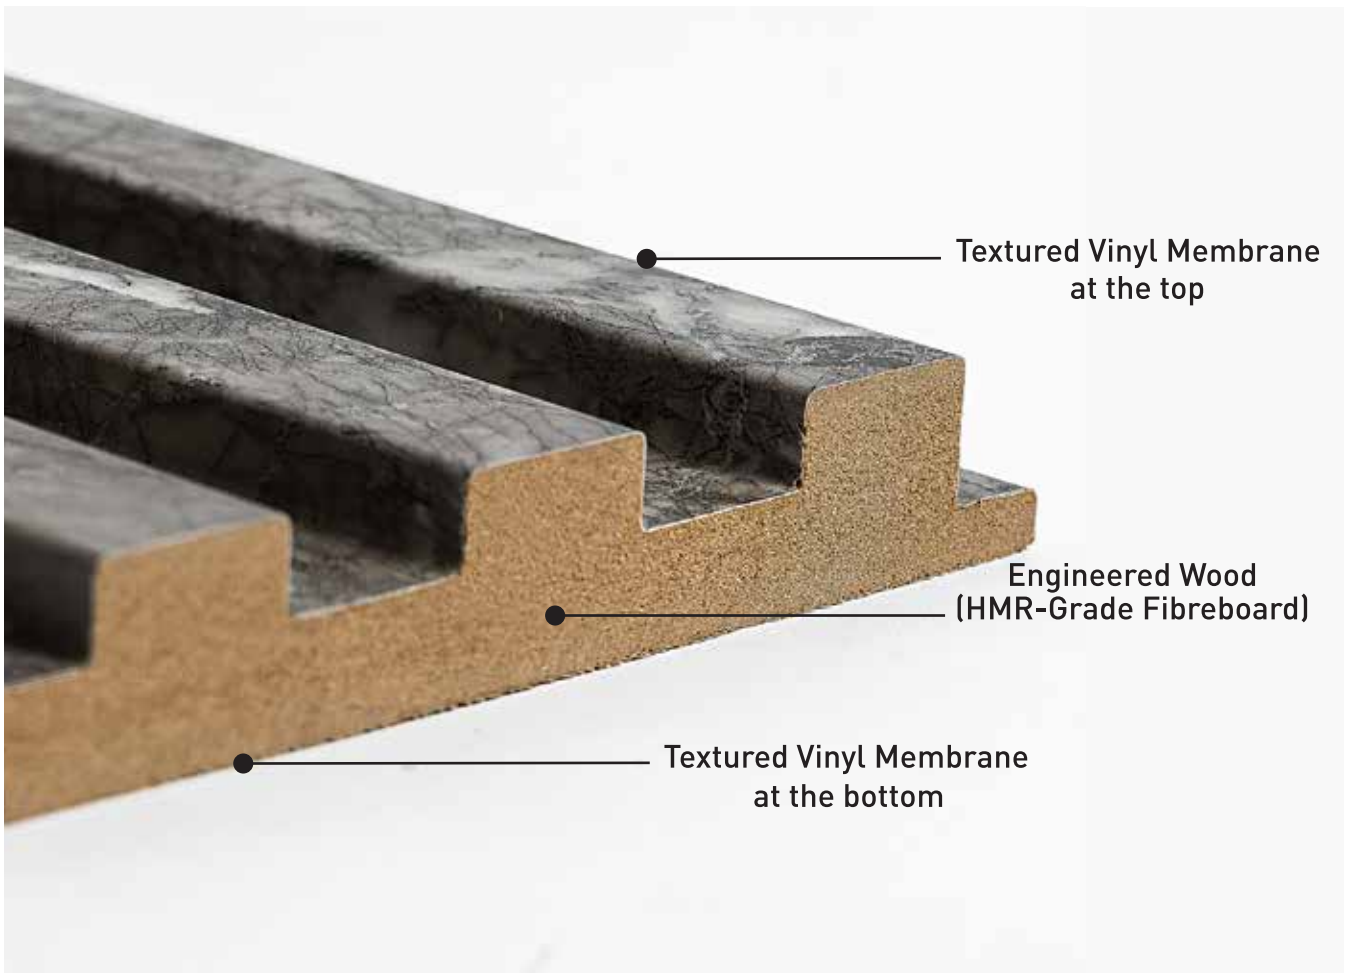


# MANUFACTURING PROCESS

- Refining raw wood fibres for quality.
- Gluing, pressing & calibrating into uniform panels.
- Routing wooden panels into desired designs.
- Applying textured Poly Vinyl membrane on top.


**3771  
SLATS**

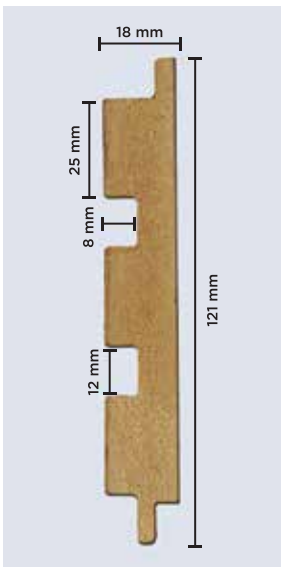


**1001  
RIBBED SLATS**

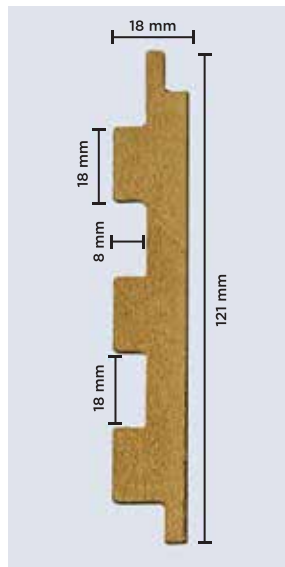


**3786  
TWO SLATS**

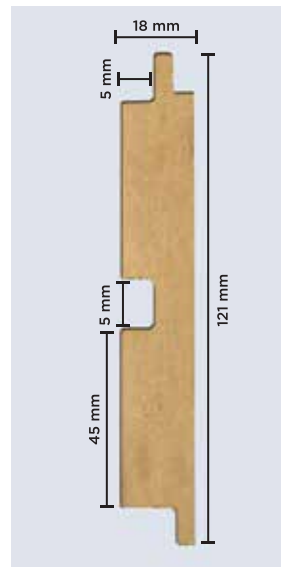


**3993  
BARCODE**

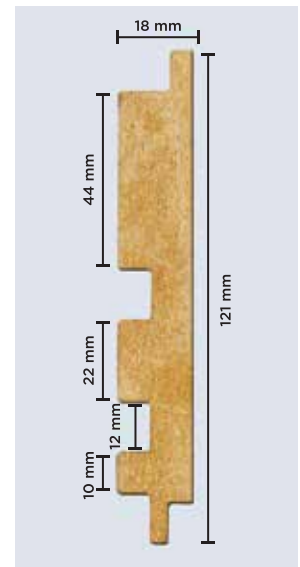


**5050  
PEAKS**

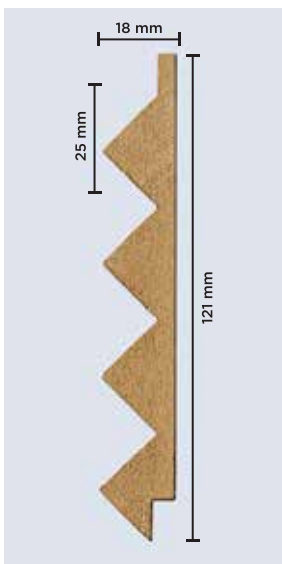


**5151  
FLUTES**

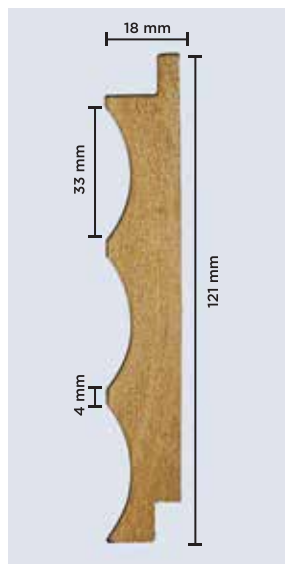

**2050  
TWO FLUTES**

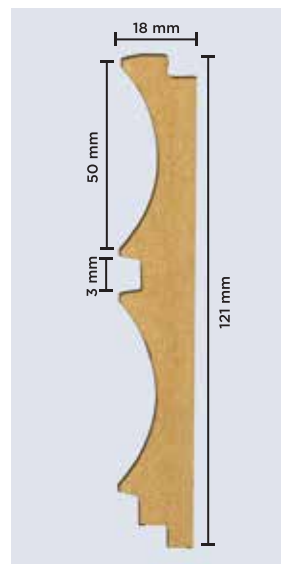

**LMBR  
SPIRALS**

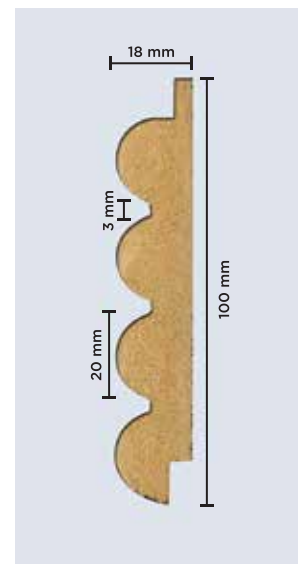

A large log is being processed in a sawmill. The log is positioned horizontally, and a large metal blade is visible above it, cutting through the wood. A thick plume of sawdust is being ejected from the cut, filling the air. The background shows a dense forest of green trees. The scene is captured in a close-up, slightly low-angle shot, emphasizing the scale of the machinery and the volume of wood being processed.

# TIMBER PROFILES



CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



vivre  
PANELS

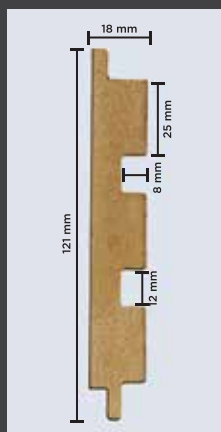

3771 - SLATS  
101 Dark Teak

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER

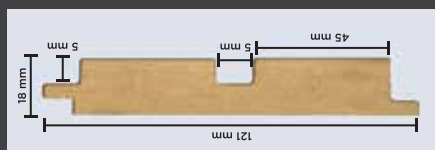

3786 - XL SLATS

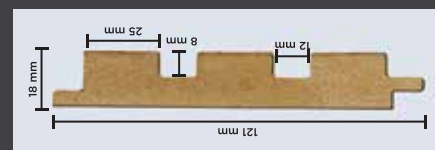

3771 - SLATS

101 Dark Teak

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

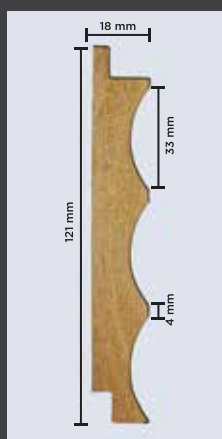

5151 - FLUTES  
101 Dark Teak



CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



**vivre**  
PANELS

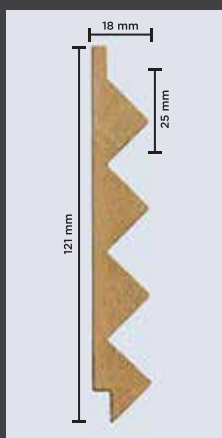

5050 - PEAKS  
101 Dark Teak



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



**vivre**  
PANELS

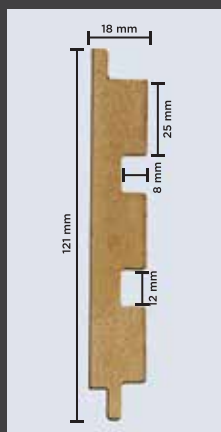

3771 - SLATS  
102 Light Teak



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

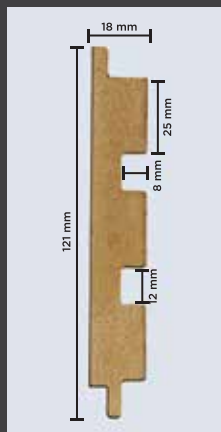

3771 - SLATS  
103 American Walnut

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER

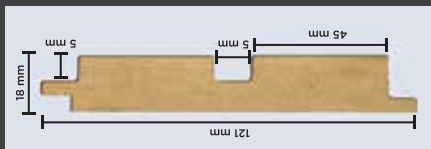

3786 - XL SLATS

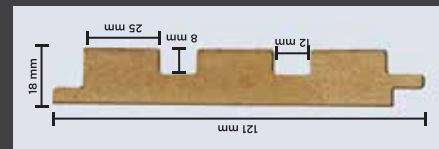

3771 - SLATS

103 American Walnut

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

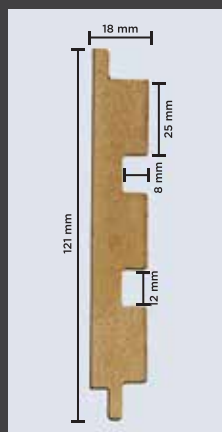

3771 - SLATS  
104 German Oak

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

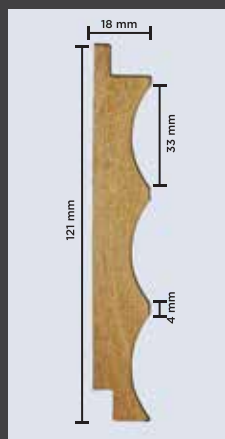

5151 - FLUTES  
104 German Oak

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



vivre  
PANELS

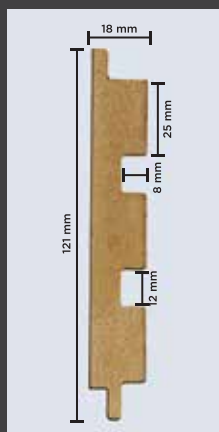

3771 - SLATS  
105 Nordic Oak

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL


VISUALIZER



vivre  
PANELS

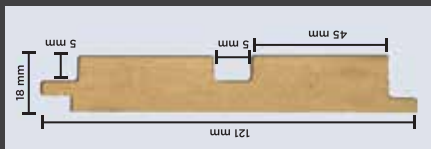

3786 - XL SLATS

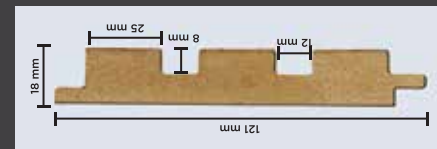

3771 - SLATS

105 Nordic Oak



CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



vivre  
PANELS

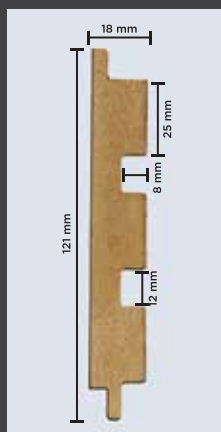

3771 - SLATS  
108 Black Walnut

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



vivre  
PANELS

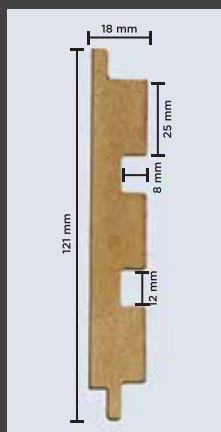

3771 - SLATS  
109 Textured Teak

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



vivre  
PANELS

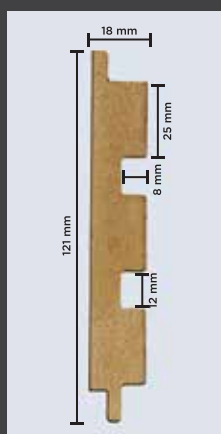

3771 - SLATS  
110 White Oak

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

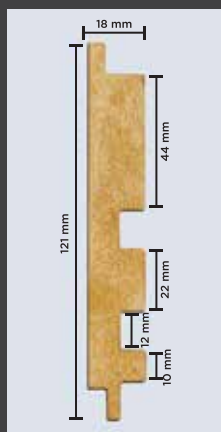

3993 - BARCODE  
106 Brazilian Rosewood



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL


VISUALIZER

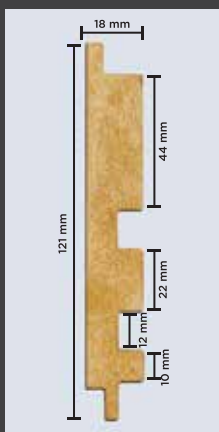

3993 - BARCODE  
107 Wenge

# MARBLE PROFILES



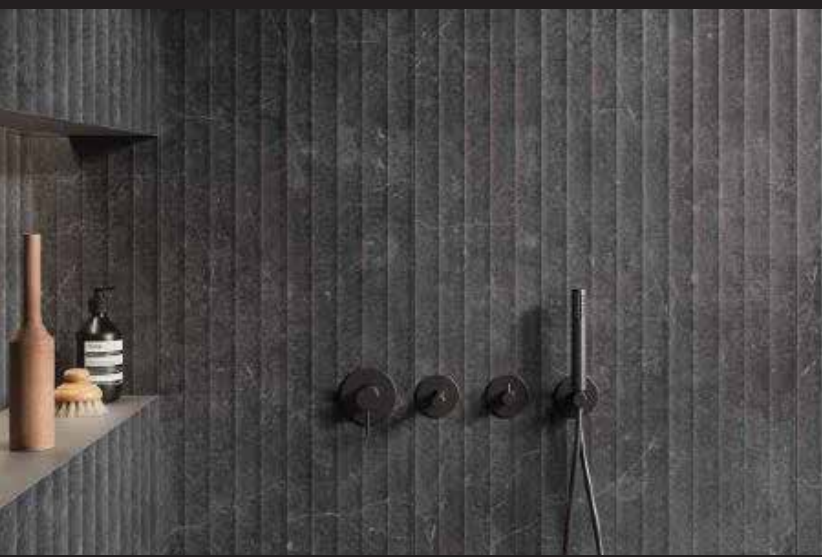

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER

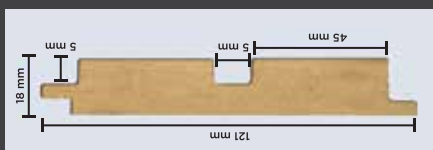

3786 - XL  
SLATS

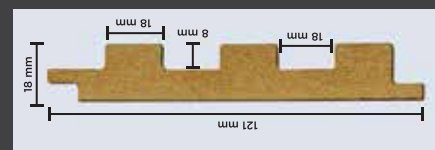

1001 - RIBBED  
SLATS

201 Statuario



**vivre**  
PANELS

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



5050  
PEAKS

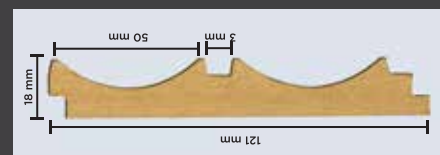

2050 - TWO  
FLUTES

201 Statuario

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



**vivre**  
PANELS

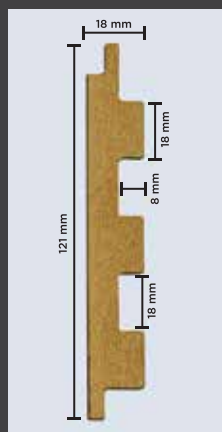

1001 - RIBBED SLATS  
202 Neo Armani

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

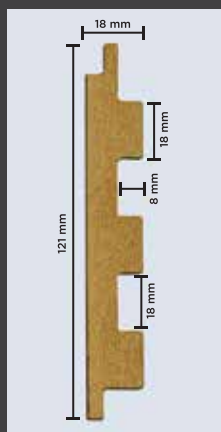

1001 - RIBBED SLATS  
203 Zaha Stone

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

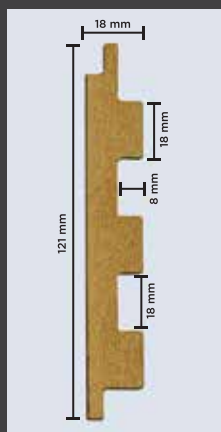

1001 - RIBBED SLATS  
204 Emperador

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



vivre  
PANELS

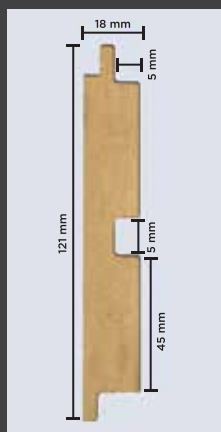

3786 - XL SLATS  
207 Travertine

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



vivre  
PANELS

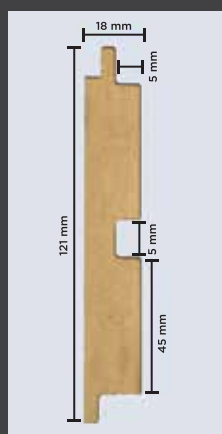

3786 - XL SLATS  
210 Brèche de Vendôme

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

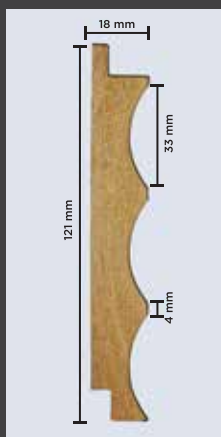

5151 - FLUTES  
205 Saint Laurent

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

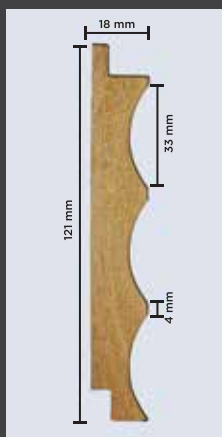

5151 - FLUTES  
206 Mar Del Plata



CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

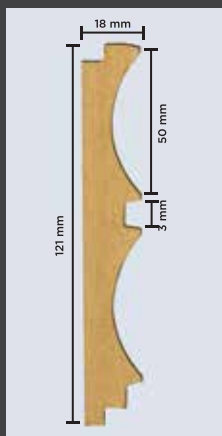

2050 - TWO FLUTES  
208 Sahara Noir

A high-angle, wide shot of a massive open-pit mine. The mine is characterized by numerous horizontal terraced levels of dark, rocky earth. A winding dirt road with visible tire tracks curves through the lower right portion of the scene. Several pieces of heavy machinery are visible: a yellow drilling rig on the left, a yellow dump truck on the far left, and a red truck on the winding road. The overall atmosphere is industrial and rugged, with a muted color palette of greys, browns, and yellows. The text 'CONCRETE PROFILES' is overlaid in the center in a white, serif font, with a gold-colored horizontal bar behind each line of text.

# CONCRETE PROFILES



CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES



METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

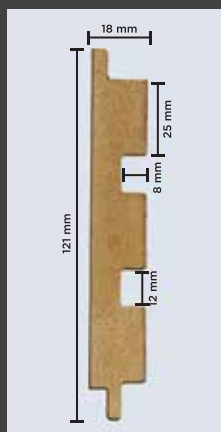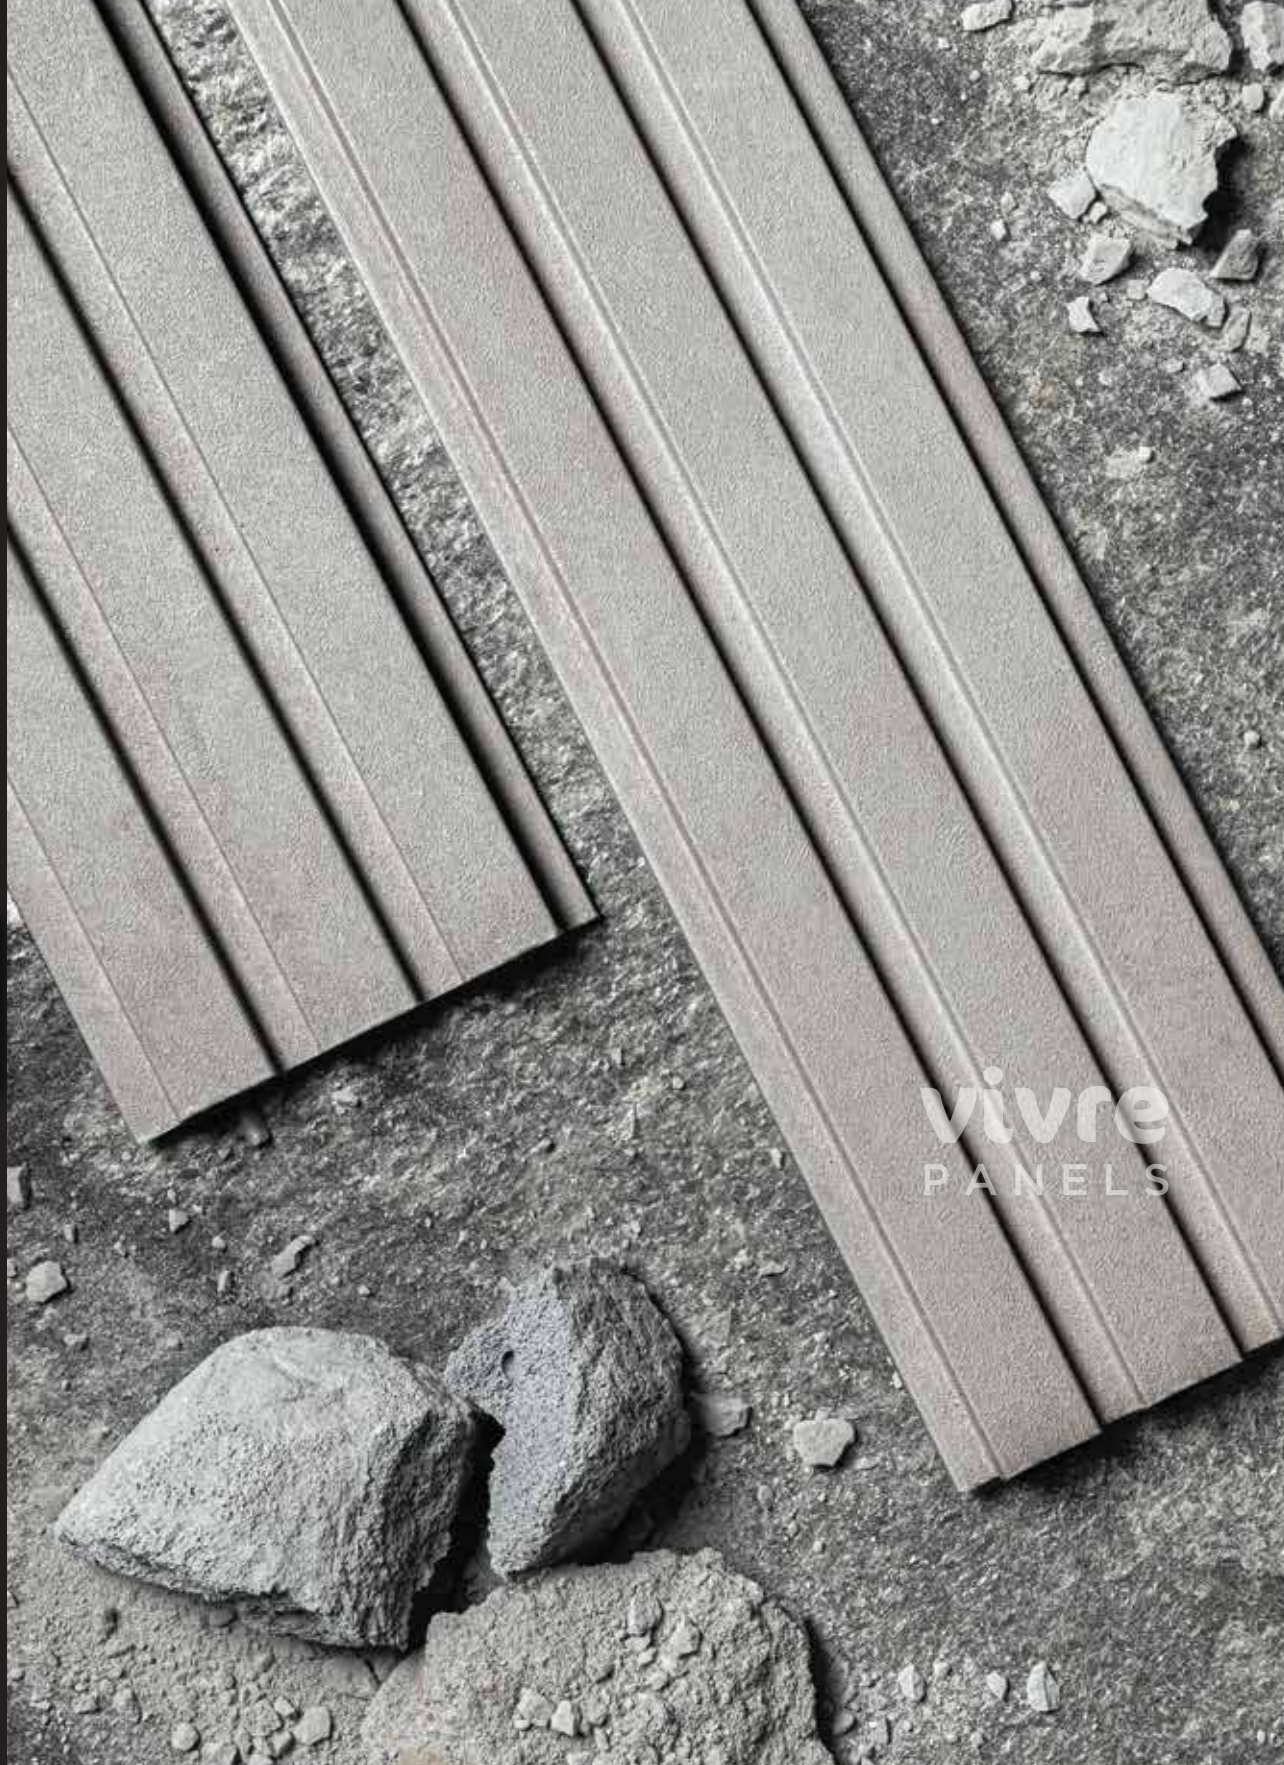

3771 - SLATS  
401 Concrete

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

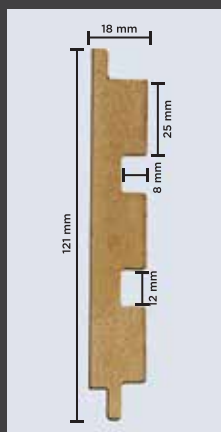

3771 - SLATS  
402 Slatestone

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

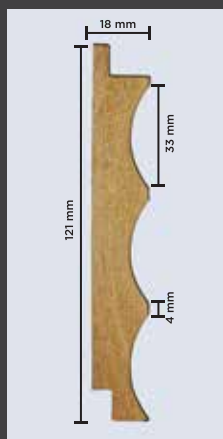

5151 - FLUTES  
403 Dark Concrete



# COLOR PROFILES





**vivre**  
PANELS

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



**vivre**  
PANELS

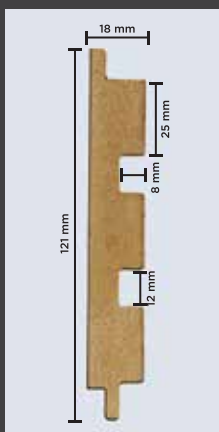

3771 - SLATS  
301 Soft Black

**vivre**  
PANELS

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

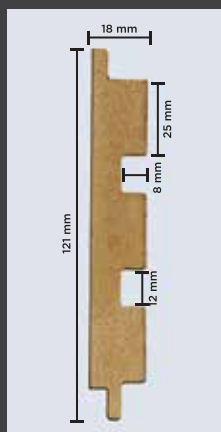

3771 - SLATS  
302 Soft White

**vivre**  
PANELS

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

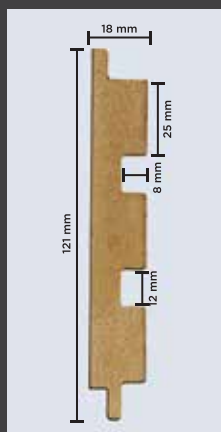

3771 - SLATS  
305 Soft Carbon

**vivre**  
PANELS

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

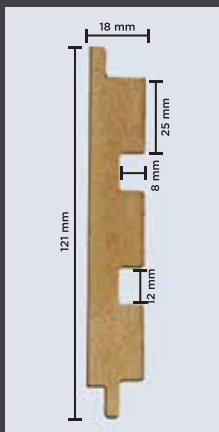

3771 - SLATS  
303 Soft Mint

**vivre**  
PANELS

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



**vivre**  
PANELS

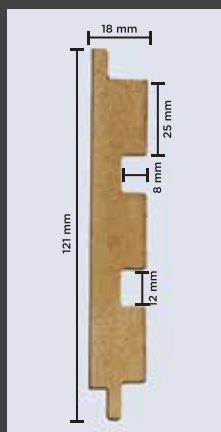

3771 - SLATS  
304 Soft Beige Grey

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

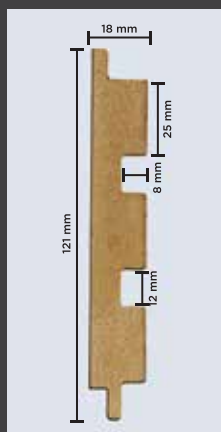

3771 - SLATS  
308 Soft Grigio

**vivre**  
PANELS

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

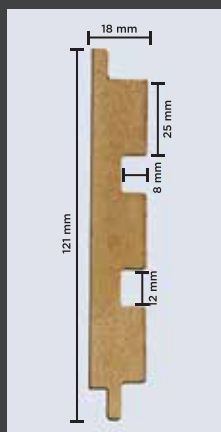

3771 - SLATS  
306 Soft Pastel Pink

**vivre**  
PANELS

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

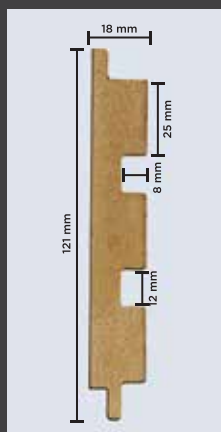

3771 - SLATS  
307 Soft Tuscany





# METAL PROFILES



CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



vivre  
PANELS

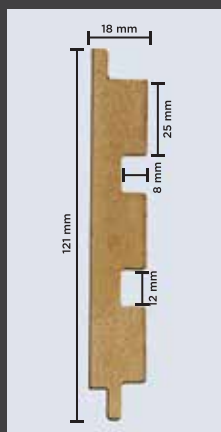

3771 - SLATS  
501 Picasso Gold

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER

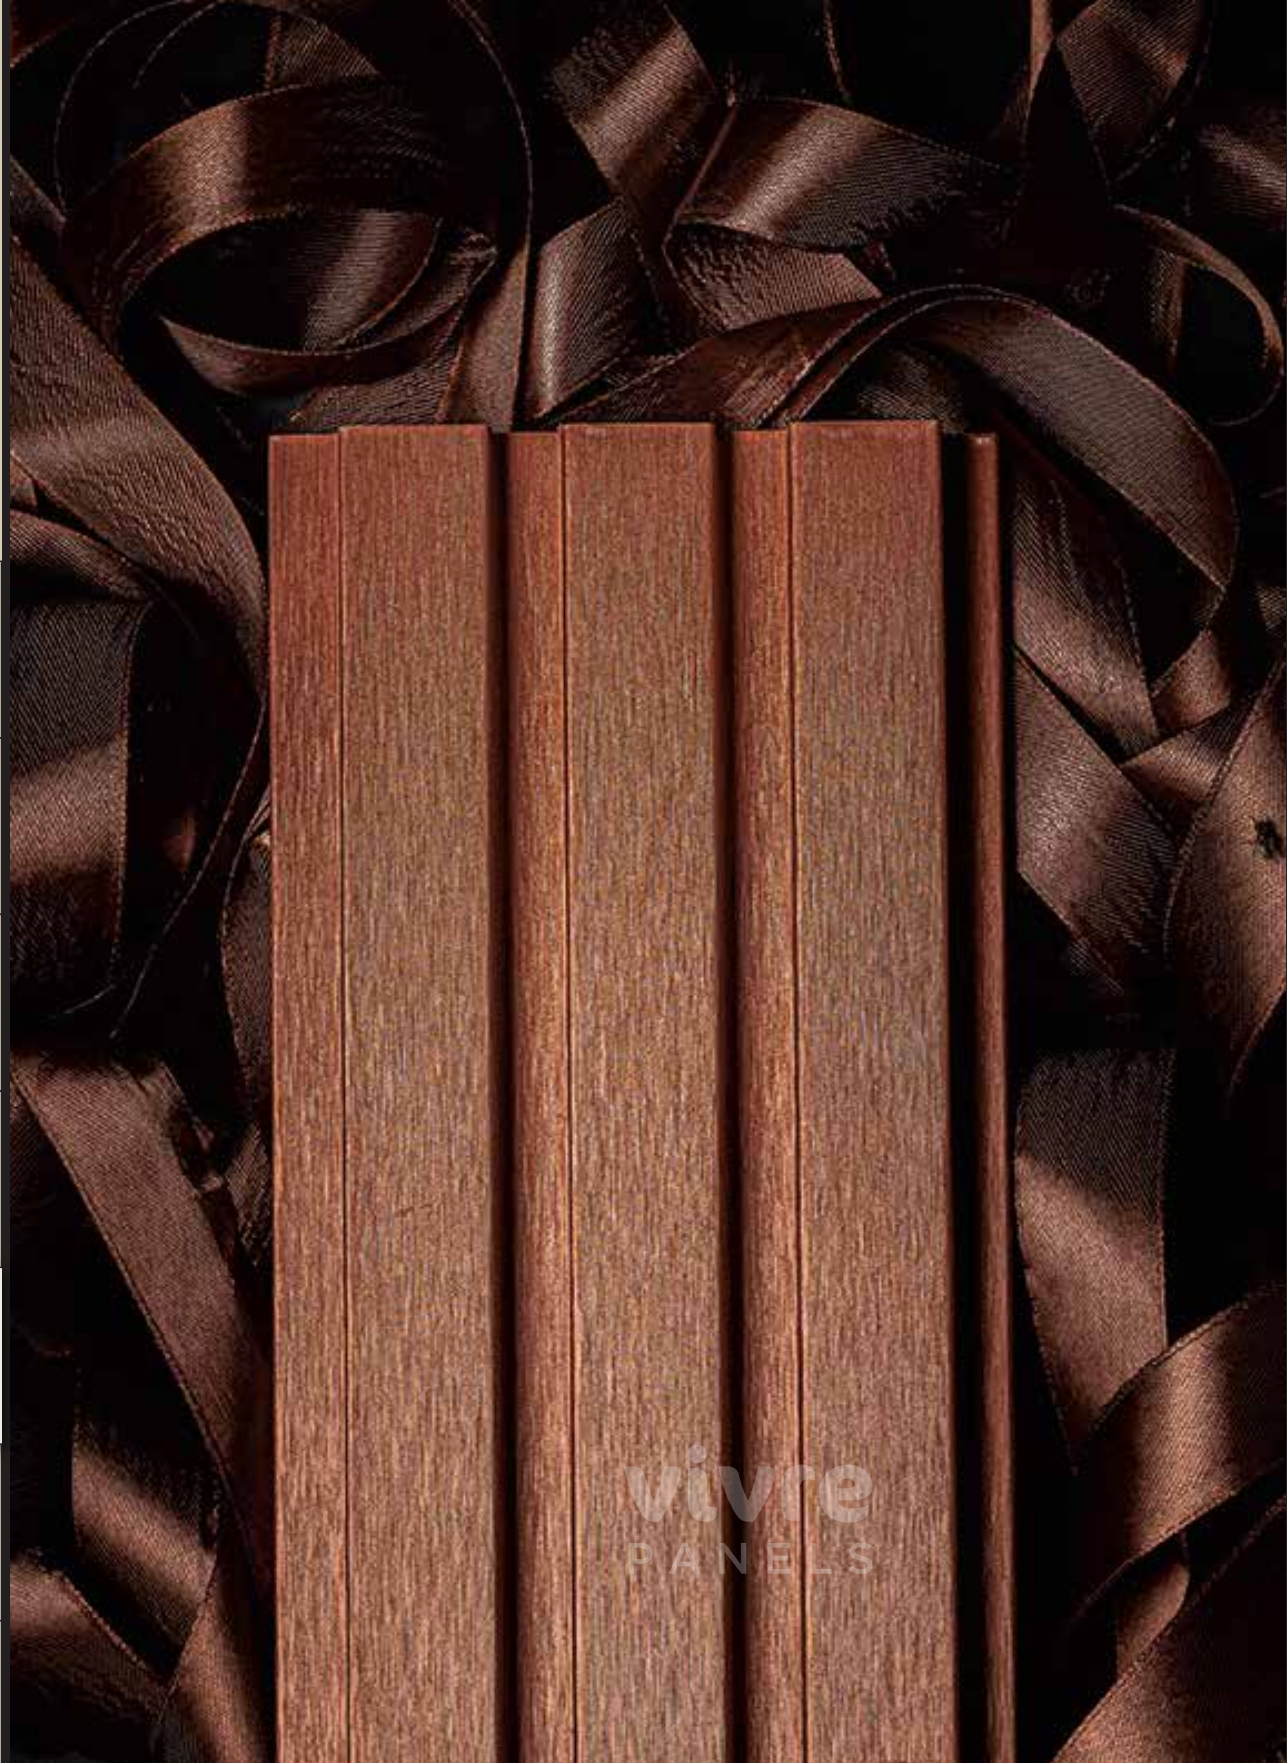

vivre  
PANELS

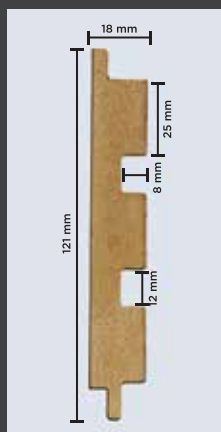

3771 - SLATS  
502 Copper

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER

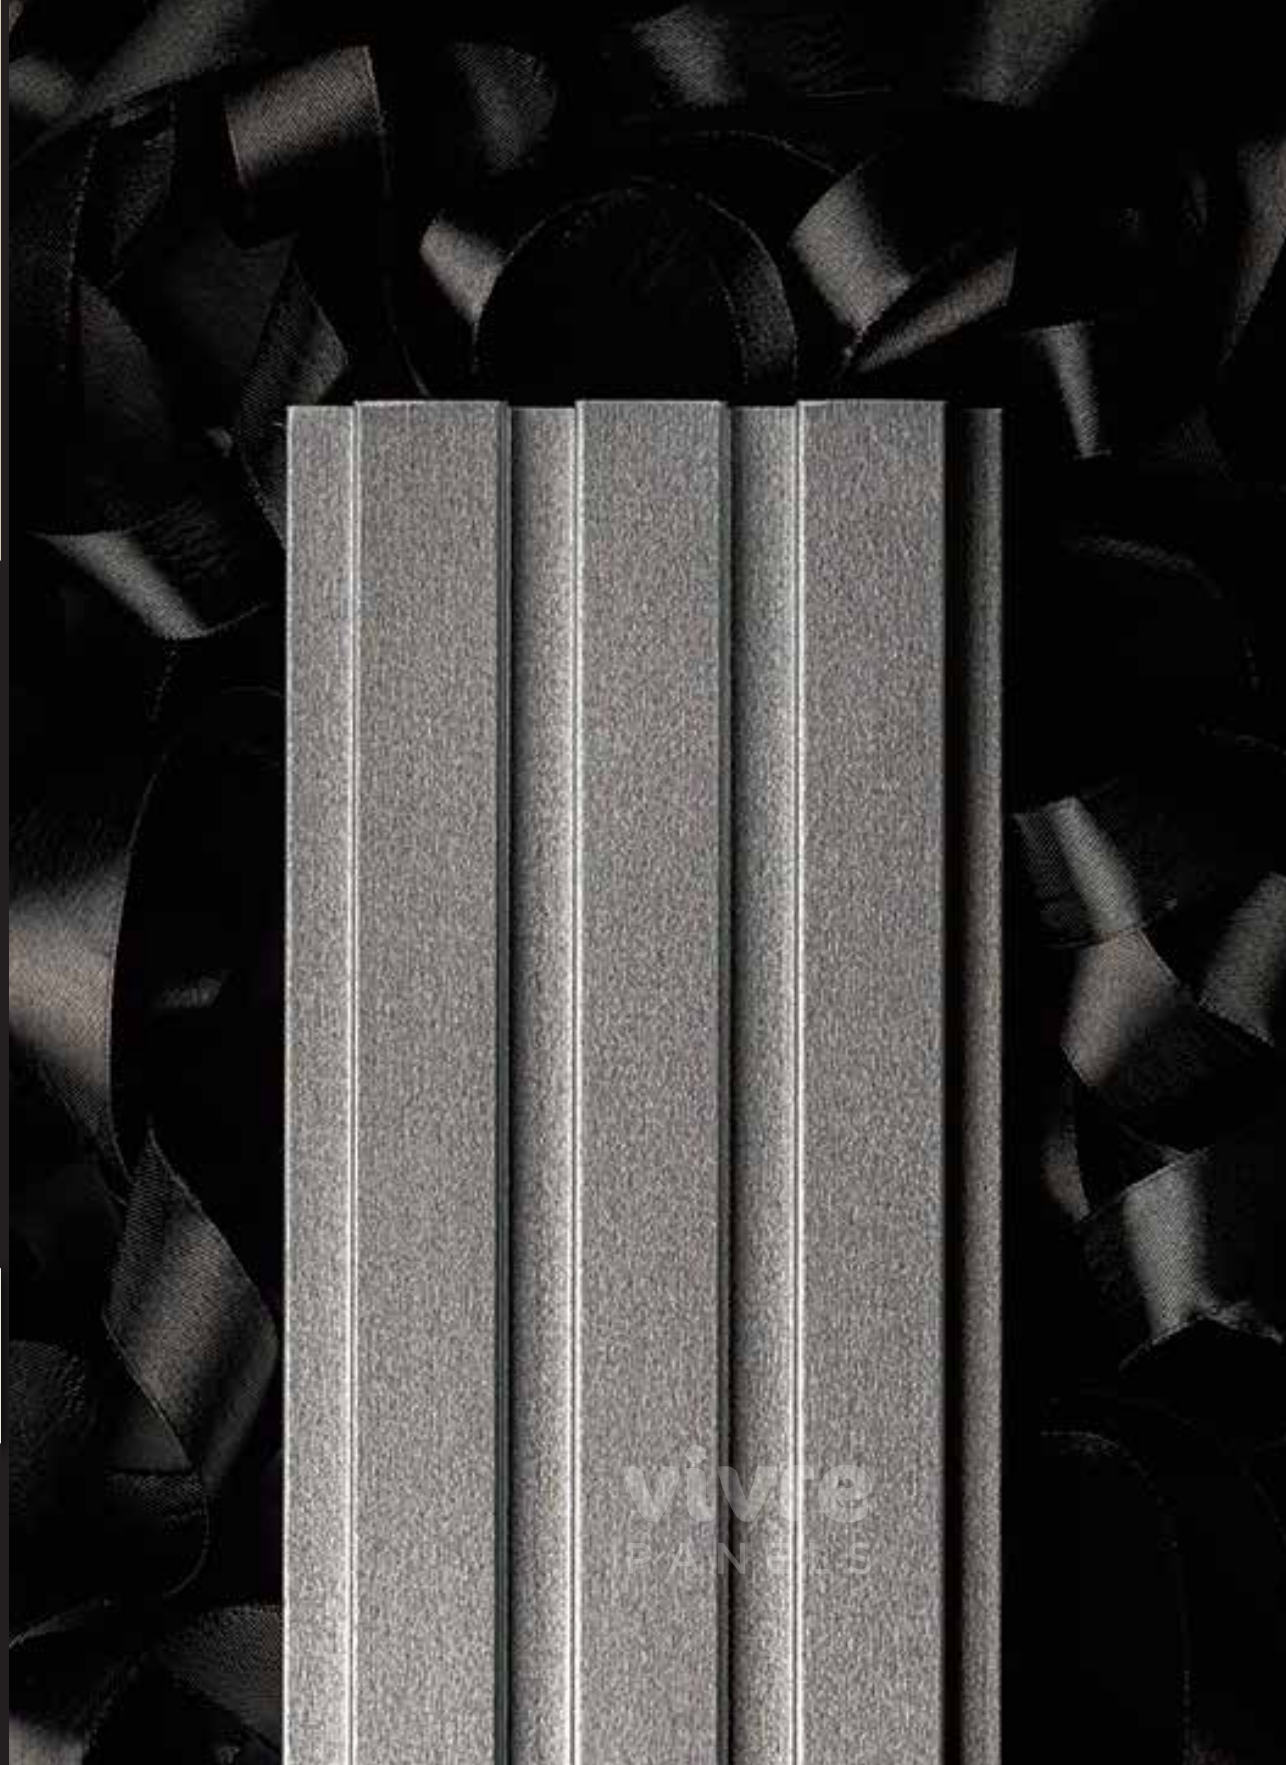

vivre  
PANELS

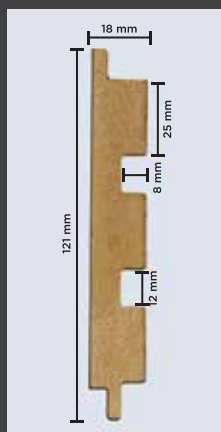

3771 - SLATS  
503 Inox

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES

METAL  
PROFILES

LEATHER  
PROFILES




HOW TO  
INSTALL

VISUALIZER



**vivre**  
PANELS

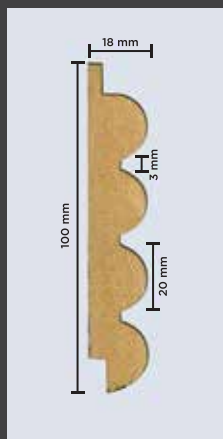

LMBR - SPIRALS  
062 Metallic Gold

A fashion design studio with a mannequin, a sewing table, and a chair. The scene is dimly lit, with a large window on the left showing a view of buildings. A black mannequin stands in the background. In the foreground, a black metal chair is positioned in front of a wooden table. On the table, there is a spool of blue thread and some fabric. A person's hand is visible on the right side of the table, holding a pencil. The floor is made of dark wood planks.

# LEATHER PROFILES

CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL

VISUALIZER

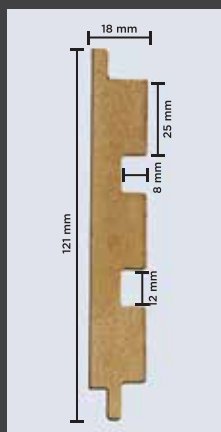

3771 - SLATS  
601 Faux Crocodile



CLICK  
MENU



TIMBER  
PROFILES

MARBLE  
PROFILES

CONCRETE  
PROFILES

COLOR  
PROFILES


METAL  
PROFILES

LEATHER  
PROFILES



HOW TO  
INSTALL


VISUALIZER

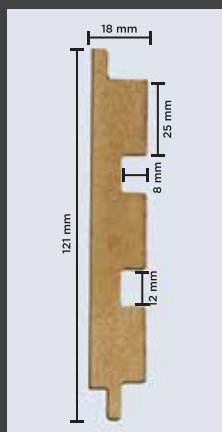

3771 - SLATS  
602 Matt Bella Gold

# INSTALLATION

- Panel the wall with either aluminum channels or plywood as the base
- Fixing the panel: Drill screws on the lower side of the 1st panel at intermittent distances
- Overlap the upper side of the 2nd panel on the 1st panel
- Again drill the screws on the lower side of the 2nd panel
- As we repeat the process, screws are hidden & we achieve perfectly consistent panelling

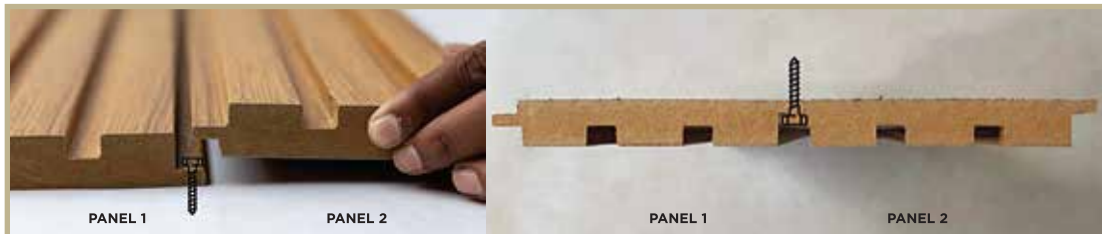


VIVRE PROFILES:  
INSTALLATION VIDEO



# VISUALIZERS



---

---

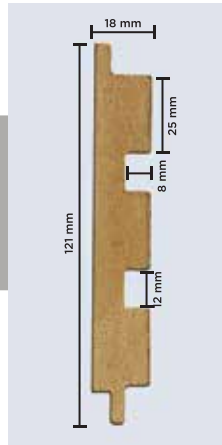



**3771 - SLATS**

**3786 - XL  
SLATS**

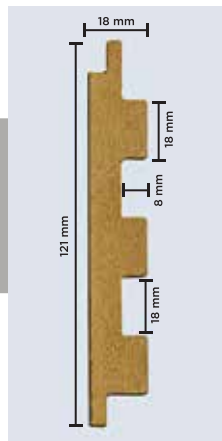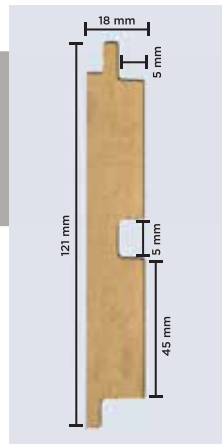



**1001 - RIBBED  
SLATS**

**3993 -  
BARCODE**

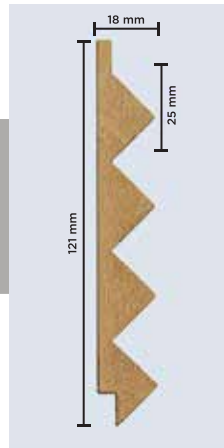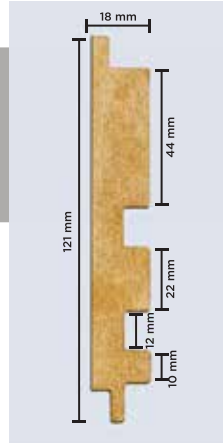

**5050 - PEAKS**

**5151 - FLUTES**

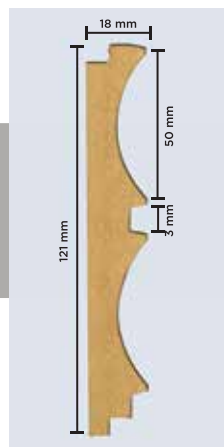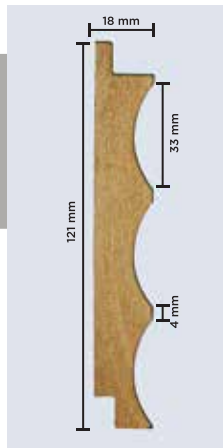

**2050 - TWO  
FLUTES**



[VivrePanels.com](https://www.vivrepanels.com)



[facebook.com/VivrePanels/](https://facebook.com/VivrePanels/)



[VivrePanels](https://www.instagram.com/VivrePanels)



[Info@VivrePanels.com](mailto:Info@VivrePanels.com)

Vivre products add natural beauty to your spaces. Colour variance, weave irregularities and shading that appears in these products are to enhance natural beauty and are not imperfections. Utmost care has been taken to provide accurate descriptions and technical specifications. Please excuse errors and omissions, if any. No guarantee / warranty of the product after installation (dimensional tolerance +/- 5 to 10%). Technical specifications and products are subject to change without prior intimation. Use same batch material to avoid colour variations. Vivre confirms that all products are free from manufacturing defects and perfectly fit for use in normal conditions.